

9-GB and 18-GB LVD Disk Drive User Notes

Refer to your workstation owner's guide or your disk drive installation guide for detailed information about installing your disk drive. Note that the disk drive tray contains the mounting screws used to mount the disk in the tray.

Notice: We recommend that you use SCSI ID 6 for your workstation's first disk drive, and SCSI ID 5 for the second hard disk drive. These disk drives support the hot-plug feature. For detailed information on using the hot-plug capabilities of these disk drives, see your owner's guide.

Minimum Software Requirements

The 9-GB and 18-GB disk drives are fully operational with HP-UX 10.20 Workstation ACE (June 1999) or later. No additional software patches are required.

The HP Part Numbers for these drives are:

Drive	Exchange Part No.	Spare Part No.
9-GB	A1658-69028	A1658-60028
9-GB	A1658-69027	A1658-60027
18-GB	A1658-69026	A1658-60026
18-GB	A1658-69031	A1658-60031
36-GB	A1658-69032	A1658-60032

Notice: No jumpers are installed on the disk drive.

Please use caution when handling disk drives:

- Place drive and tray on soft, ESD protected surface when installing and removing drive from tray. The disk drive is fragile and must be handled carefully.
- Do not drop disk drive onto hard surface, even when mounted in the disk tray.
- When removing a disk drive, ensure that the drive has sufficient time to spin down (at least 30 seconds) before removing the drive from the workstation.
- The disk drive may be hot. Use appropriate precautions.